9A10459600

TEAC

SR-L35USB

COMPACT disc DIGITAL AUDIO

CD Clock Radio

OWNER'S MANUAL

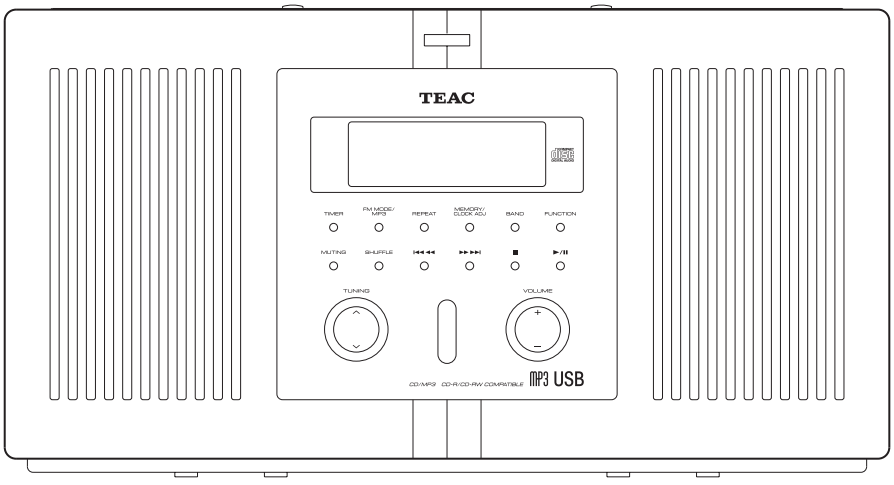

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus draws nominal non-operating power from the AC outlet with its STANDBY/ON switch in the standby position.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- An apparatus with Class I construction shall be connected to an AC outlet with a protective grounding connection.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

- DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE WITHIN!
- IF YOU ARE EXPERIENCING PROBLEMS WITH THIS PRODUCT, CONTACT TEAC FOR A SERVICE REFERRAL. DO NOT USE THE PRODUCT UNTIL IT HAS BEEN REPAIRED.
- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Contents

Thank you for choosing TEAC. Read this manual carefully to get the best performance from this unit.

Before Using the Unit 3
Discs 4
MP3 compatibility 5
Use of the folding supports 5
Wall Mounting 5
Connections 6
Remote Control Unit 7
Unit Functions 8

Basic Operation 10

Listening to a Disc 11
Listening to a USB Memory Card 12
Basic Operations for a Disc and USB Memory Card . . . 13
Repeat Playback 15
Search Mode (MP3 only) 16
Programmed Playback 18
Shuffle Playback 19

Listening to the Radio 20
Preset Tuning 21

Setting the Clock 22
Setting the Timer 23

Troubleshooting 25
Specifications 26

Before Using the Unit

Read this before attempting any operations

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank the cord.
- To keep the laser pickup clean, do not touch it. Always close the disc compartment lid when not in use.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.

DO NOT MOVE THE UNIT DURING PLAYBACK

During playback, the disc rotates at high speed. Do NOT lift or move the unit during playback. Doing so may damage the disc or the unit.

WHEN MOVING THIS UNIT

When moving or packing the unit, be sure to remove the disc. Moving this unit with the disc loaded may result in damage to this unit.

Discs

Discs which can be played on this unit:

- Conventional audio CDs bearing the COMPACT DISC DIGITAL AUDIO logo on the label:

- Properly finalized CD-R and CD-RW discs
- MP3 CDs

Note:

- Depending on the quality of the disc and/or the condition of the recording, some CD-R/CD-RW discs may not be playable.

- This player cannot play Windows Media-formatted audio files.
  (Windows Media is a trademark of Microsoft Corporation.)

- Copy-protected discs and other discs that do not conform to the CD standard may not play back correctly in this player. If you use such discs in this unit, TEAC Corporation and its subsidiaries cannot be responsible for any consequences or guarantee the quality of reproduction. If you experience problems with such non-standard discs, you should contact the producers of the disc.

- Always place the disc on the disc tray with the label side up. (Compact discs can be played or recorded only on one side.)

- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.



How to remove the disc

How to hold the disc

- Should the disc become dirty, wipe the surface radially (from the center hole outward towards the outer edge) with a soft, dry cloth:



- Never use such chemicals as record sprays, antistatic sprays or fluid, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.

- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."

- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.

- Do not play any disc that is warped, deformed or damaged.
  Playing such discs may cause irreparable harm to the playing mechanisms.

- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will fall on them, and away from sources of heat such as radiators or heat-generating electrical devices.

- Printable CD-R and CD-RW discs aren't recommended, as the label side might be sticky and damage the unit.

- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.

- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.

- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.

- Do not use CDs with an irregular shape (octagonal, heart shaped, business card size, etc.). CDs of this sort can damage the unit:



- If you are in any doubt as to the care and handling of a CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

MP3 compatibility

- File names of MP3 should be alphanumeric characters. This unit cannot display symbols and full-size or 2 bytes-wide characters (such as Japanese, Chinese, etc.) correctly. Also, be sure to use the file extension ".mp3".
- The disc must be finalized in order to play.
- The CD-ROM must be ISO 9660 compatible.
- When more than 200 files or folders are recorded on the disc, the unit might not be able to play it correctly.
- The file must be mono or stereo MPEG-1 Audio Layer 3 format, 44.1 or 48 kHz, fixed bit-rate.

Use of the folding supports

For better stability in using the unit on a table or other flat surface, you can pull out the pair of hinged supports, as shown.

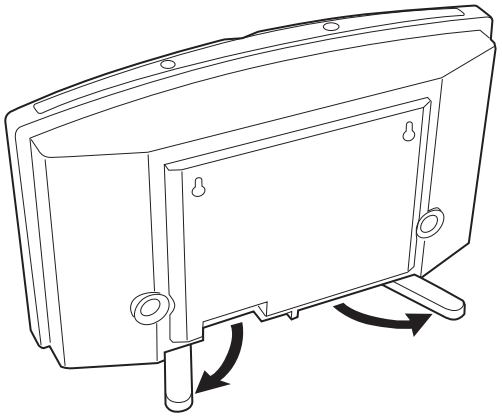

Wall Mounting

If you want to, you can mount the unit on a wall.

You need to have hooks available that snugly fit into the hanging holes in the back of the unit.

Precaution:

- Be aware of the best possible direction for receiving AM broadcasts (this unit has no AM anntena you can turn around).

1. **Use the supplied guide sheet to mark the exact drilling points on the wall.**
2. **Drill holes in the wall at the marked points.**
3. **Screw your hooks into the wall.**
4. **Using the hanging holes in the back of the unit, carefully hang it onto the hooks.**

Note:

- Ensure that the unit locks onto the hooks and that the hooks are strong enough to support the weight before releasing the hands.

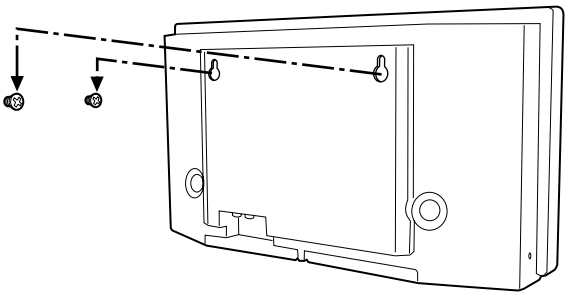

Connections

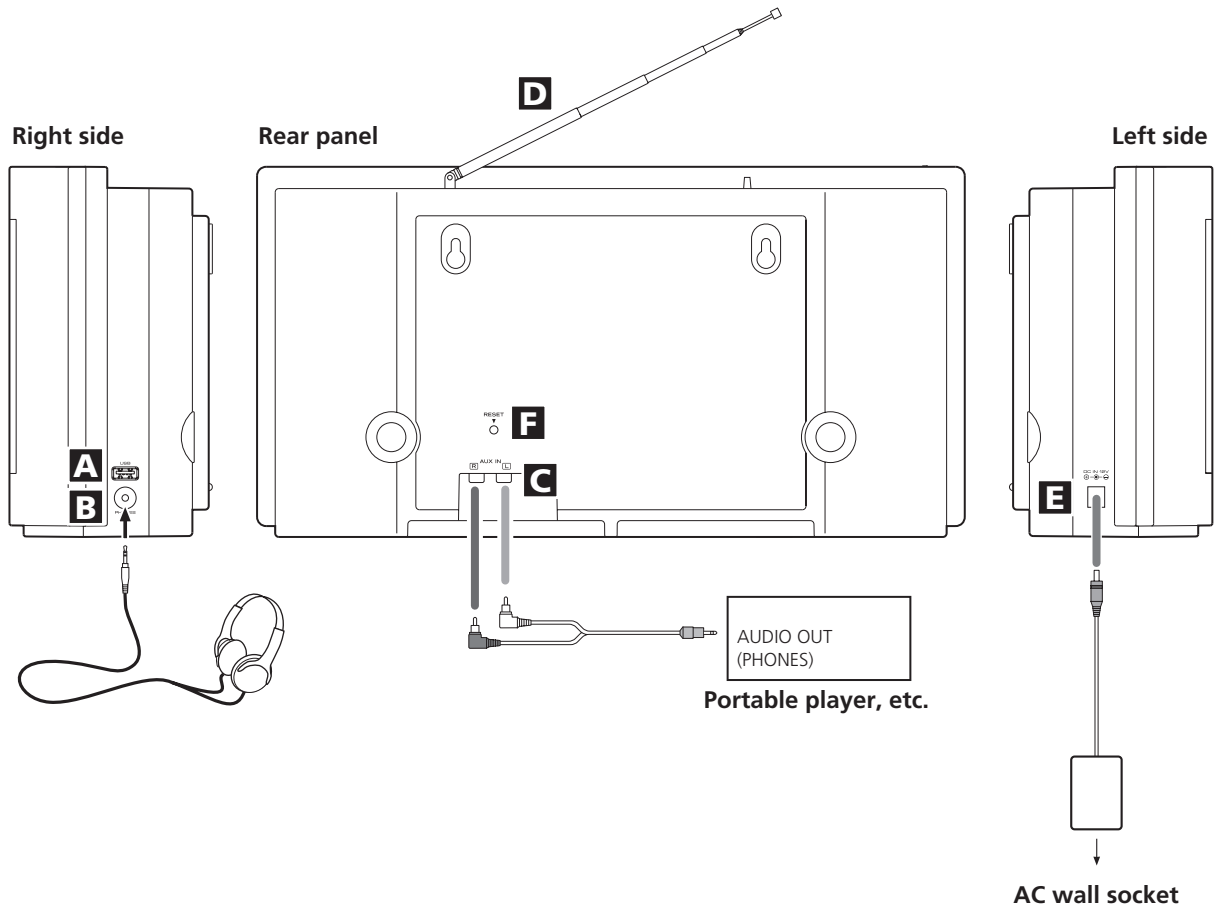

CAUTION:

- Switch off the power before making connections.
- Read the instructions of each component you intend to use with this unit.

A USB connector

This connector is for connecting your USB memory card containing MP3 music.

B PHONES jack

For private listening, insert the headphones plug into this jack, and adjust the volume using the VOLUME button.

C AUX IN jacks

You can connect an external source such as a portable player to the AUX IN jacks.
Connect the component using a commercially-available RCA cable.

Make sure to connect:
white plug → white jack (L: left channel)
red plug → red jack (R: right channel)

- Use L-shaped pin plugs for connecting into the AUX IN jacks if you are using the unit on a table or other flat surface.
- When using the PHONES jack of your mini player, you must adjust the volume of the mini-player or you may hear no sound from your SR-L35USB.
- Be sure to insert each plug securely. To prevent hum and noise, do not bundle the connection cords with the power cord.

D FM lod antenna

While in FM mode, tune in an FM station and extend the antenna to find the best position for the reception. This antenna may need to be repositioned if you move your unit to a new location.

E DC IN jack

Connect the provided AC adaptor to this jack. Then connect the AC adaptor's plug to the AC wall socket.

- Do not use any AC adaptors other than the one included with this unit to avoid fire, electric shock, etc. Be sure to connect the adaptor to an AC outlet that supplies the correct voltage.

F RESET switch

In the following cases, function buttons may not work properly.

- When the system is damaged by electrical shock.
- When the power is irregular or has electrical noises.

In these cases, press the RESET switch once or twice with a pencil or a ball-point pen lightly.
All the settings kept in memory (such as preset stations) will be erased.

Remote Control Unit

The provided Remote Control Unit allows the unit to be operated from a distance.
When operating the remote control unit, point it towards the remote sensor on the front panel of the unit.

- Even if the remote control unit is operated within the effective range (5m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other products which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

Battery Installation

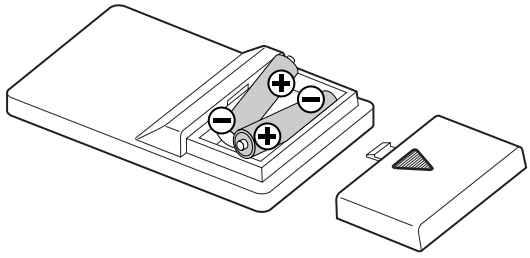

1. Remove the battery compartment cover.
2. Insert two "AAA" (R03 or UM-4) dry batteries. Make sure that the batteries are inserted with their positive "⊕" and negative "⊖" poles positioned correctly.
3. Close the cover.

Battery Replacement

If the distance required between the remote control unit and main unit decreases, the batteries are exhausted. In this case replace the batteries with new ones.

Precautions concerning batteries

- Be sure to insert the batteries with correct positive "⊕" and negative "⊖" polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Rechargeable and non-rechargeable batteries can be used. Refer to the precautions on their labels.
- When the remote control unit is not to be used for a long time (more than a month), remove the batteries from the remote control unit to prevent them from leaking. If they leak, wipe away the liquid inside the battery compartment and replace the batteries with new ones.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them in a fire.

Top panel

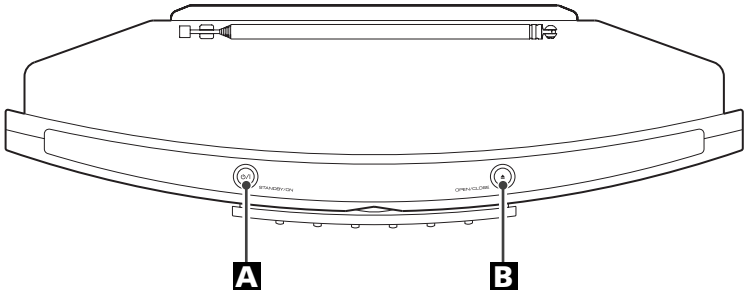

Front panel

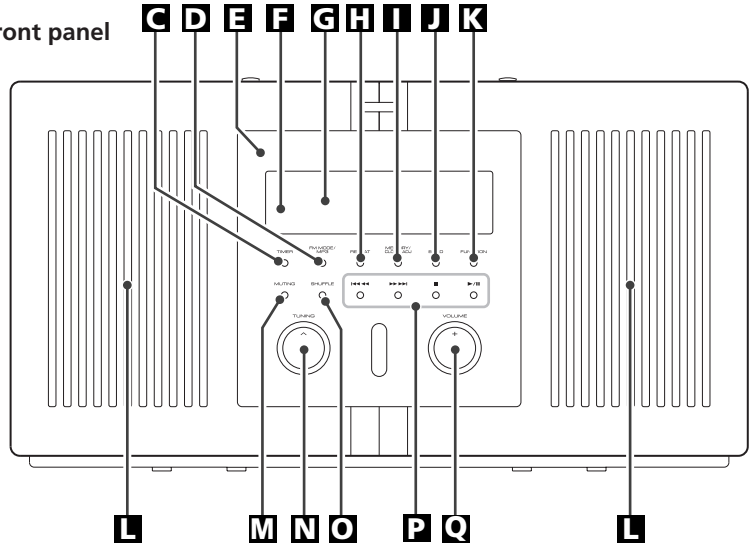

Remote control unit

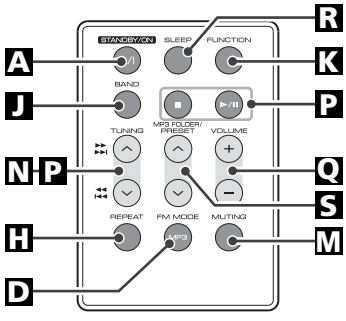

A STANDBY/ON

Use this button to turn the unit on or standby.

> The equipment draws a nominal amount of power from the AC outlet even with its STANDBY/ON switch in the STANDBY position.

B OPEN/CLOSE

Press this button to open and close the CD compartment.

C TIMER

Use this button together with the SKIP buttons to set the timer.

D FM MODE/MP3

In FM TUNER mode, use this button to select stereo or monaural.

During playback of an MP3 file, use this button to search track name.

During playback of an MP3 file, press and hold this button for more than 1 second to display MP3 information.

During playback of CD, use this button to switch the ESP function on or off.

E CD compartment

Press the OPEN/CLOSE button on top of the unit to open the CD compartment.

F Remote sensor

When operating the remote control unit, point it towards here.

G Display

H REPEAT

In CD or CARD-USB mode, use this button for repeat playback.

I MEMORY/CLOCK ADJ

In CD or CARD-USB mode, use this button to program tracks.

In TUNER mode, use this button to store preset channels into memory.

This button is also used for clock adjustment.

J BAND

Use this button to select AM or FM.

K FUNCTION

Use this button to select a source (TUNER, CD, AUX or CARD-USB).

L Speakers (stereo)

M MUTING

Use this button to mute the sound.

N TUNING

Use this button to tune in a station.

O SHUFFLE

Use this button for shuffle playback.

P Disc/USB memory card operation buttons

When TUNER or AUX is selected, these buttons won't work.

STOP (■)

Use this button to stop playback.

PLAY/PAUSE (►/❚❚)

Use this button to start or pause playback.

SKIP/SEARCH (⏮ ◄◄/►► ⏭)

Press these buttons to skip tracks.

Hold down these buttons to search for a part of a track.

Q VOLUME

Use this button to adjust the volume.

R SLEEP

Use this button to set sleep timer.

S MP3 FOLDER/PRESET

In TUNER mode, use these buttons to select preset stations.

During playback of MP3 files, use these buttons to select a folder in the disc or USB memory card.

Note:

To simplify explanations, instructions in this manual refer to the names of the buttons and controls on the front panel only. Associated controls on the remote control will also operate similarly.

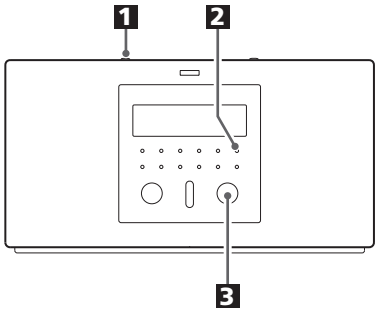

1 Press the STANDBY/ON switch to turn the unit on.

2 Select a source by pressing the FUNCTION button.



- To listen to an external source connected to the AUX IN jacks, select "AUX".

3 Play the source and adjust the volume using the VOLUME button.

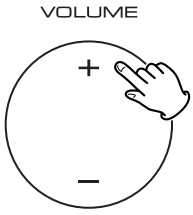

- When the PHONES jack of your mini player is connected to the AUX IN jacks of the SR-L35USB, you must adjust the volume of the mini-player or you may hear no sound from speakers.

Muting

To mute the sound temporarily, press the MUTING button. Press the MUTING button again to restore the sound.

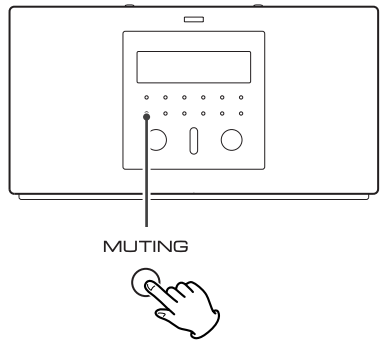

- While muting is engaged, the VOLUME level indicators blink.

Headphones

For private listening, insert the headphones plug into the PHONES jack, and adjust the volume using the VOLUME button. The sound from the speakers is cut off while the headphone jack is inserted.

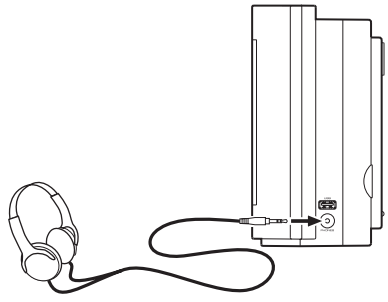

Sleep Timer

Repeatedly pressing the SLEEP button permits setting an interval (from 90 down to 10 minutes) after which you want the unit to automatically turn off and shift into Standby mode.

Each press of the SLEEP button changes the time indication by 10 minutes.

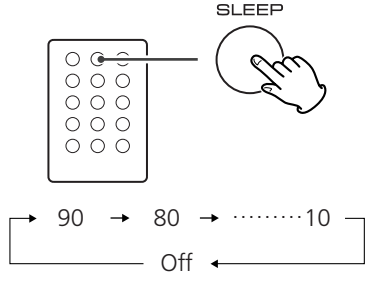

Listening to a Disc

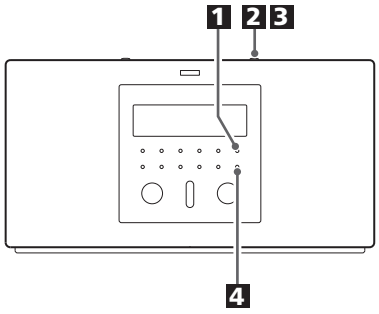

1 Press the FUNCTION button to select "CD".



2 Press the OPEN CLOSE button (⏏) to open the disc compartment cover.

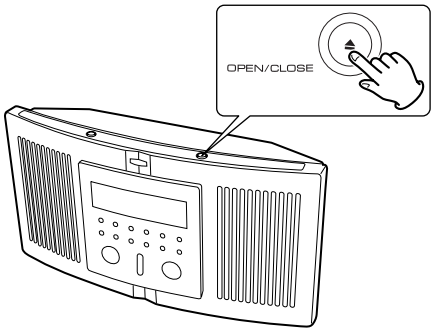

3 Put a disc onto the center spindle in the CD compartment, with the label side facing you, and press the OPEN/CLOSE button to close the CD compartment.

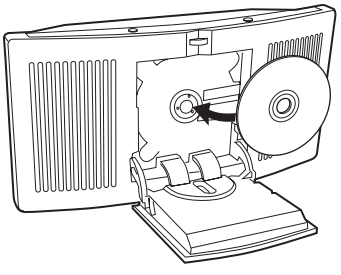

CD's must be pressed securely onto the Spindle, until a "click" is heard.

- Never place more than one disc in the unit.

When opening and closing, press the OPEN/CLOSE button (⏏) on top of the unit. Do not force the door by hand during opening and closing operations.

- It takes a few seconds for the unit to load the disc. No buttons will work during loading. Wait until the total number of the tracks and the total play time of the disc are displayed.
- When no disc is loaded in the CD player, "NO DISC" is displayed.

When a CD is loaded

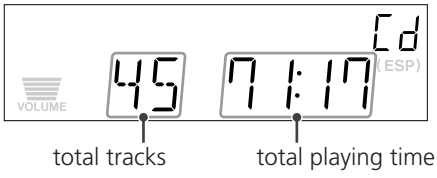

When a MP3 disc is loaded

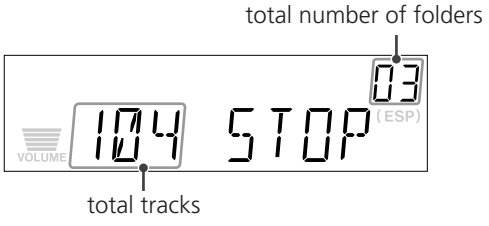

4 Press the Play/Pause button (►/II) to start playback.

Playback starts from the first track of the disc.

- MP3 tracks recorded out of folders are automatically put in the "ROOT" folder, and playback starts from the first track of the ROOT folder.
- When the playback of all the tracks has finished, the unit stops automatically.

Listening to a USB Memory Card

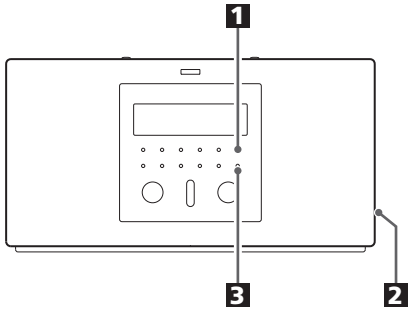

- Do NOT use a high-capacity USB hard disc with this unit.

1 Press the FUNCTION button to select "CARD-USB".

2 Plug your USB memory card into the USB connector.

- You can reverse steps **1** and **2**.

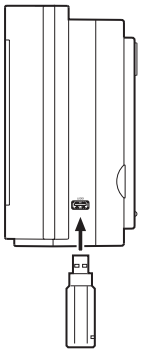

- It takes a few seconds for the unit to load the USB memory card. No buttons will work during loading. Wait until the total number of the tracks and the total number of folders on the USB memory card are displayed.

When a USB memory card is loaded

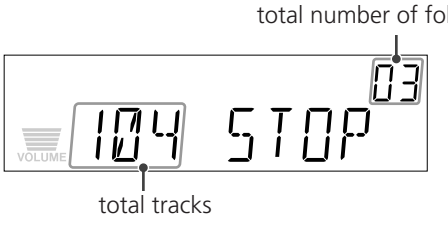

3 Press the Play/Pause button (►/II) to start playback.

Playback starts from the first track on the USB memory card.

- MP3 tracks recorded out of folders are automatically put in the "ROOT" folder, and playback starts from the first track of the ROOT folder.
- When the playback of all the tracks has finished, the unit stops automatically.

To suspend playback temporarily (pause mode)

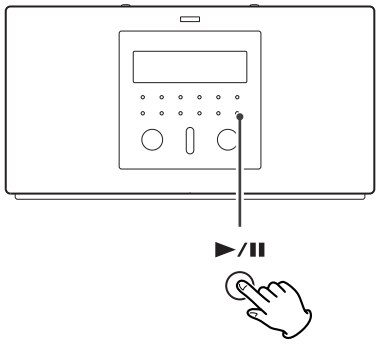

Press the Play/Pause button (►/II) during playback. Playback stops at the current position. To resume playback, press the Play/Pause button (►/II) again.

To stop playback

Press the Stop button (■) to stop playback.

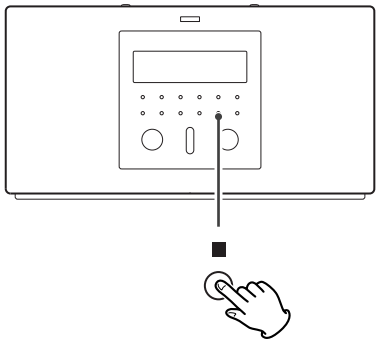

Search for a part of a track

During playback, hold down the skip button (I◄◄ or ►►I) and release it when the part you want to listen to is found.

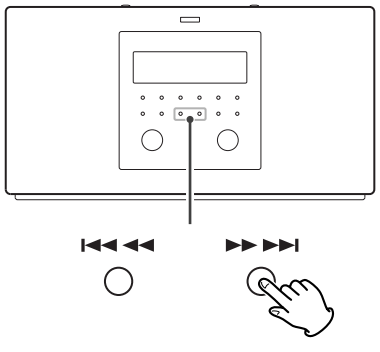

To skip to the next or a previous track

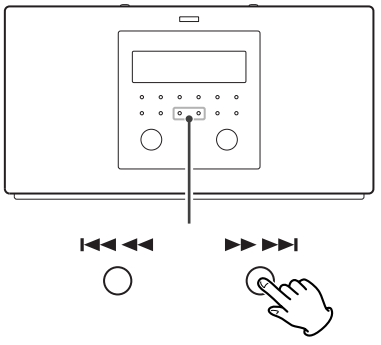

During playback, press the skip button (I◄◄ or ►►I) repeatedly until the desired track is found. The selected track will be played from the beginning.

In the stop mode, press the skip button (I◄◄ or ►►I) repeatedly until the track you want to listen to is found. Press the Play/Pause button (►/II) to start playback from the selected track.

- When the I◄◄ button is pressed during playback, the track being played will be played from the beginning. To return to the beginning of the previous track, press the I◄◄ button twice.
- During programmed playback, the next or previous track in the program is played.

Select a folder of MP3 files (MP3 only)

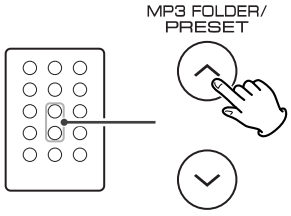

During playback of an MP3 file, press the MP3 FOLDER button repeatedly until the desired folder is found. Playback starts from the first track of the selected folder.

- If the unit is stopped, press the Play/Pause button to start playback.

To display the MP3 information

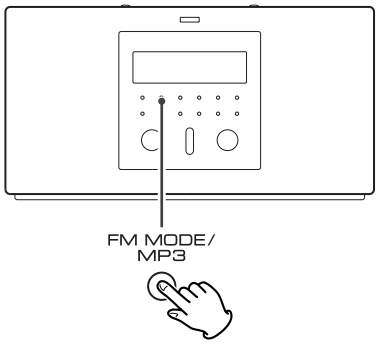

During playback of an MP3 file, press the MP3 button for more than 1 second. The information about the current track is displayed as follows:

Filename → Title → Artist → Album

- NONE appears when there is no information.
- UNKNOWN appears when the unit cannot read the information.

Press the MP3 button for more than 1 second again to cancel the MP3 information mode.

ESP (Electronic Shock Protection)

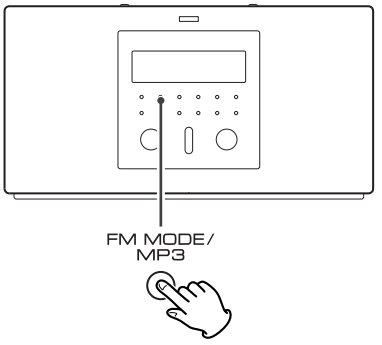

The ESP stores the music in the buffer to prevent sound from skipping.

During playback of a CD, press the MP3 button to turn the ESP on or off. When you turn the ESP on, "10 SEC (10 seconds)" briefly appears, and the (ESP) indicator lights on the display.

- The (ESP) indicator blinks while the unit is filling the buffer.
- When the unit is on the stable place and free from mechanical shocks, you can turn this function off.
- During playback of MP3 disc, this function is always ON.
- This function is not available during playback from USB memory card.

Repeat Playback

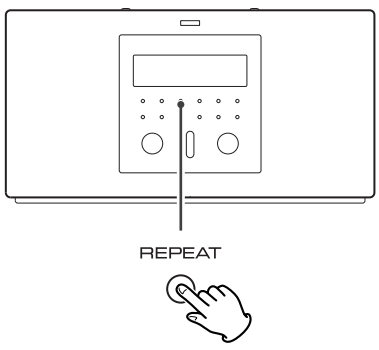

Each time the REPEAT button is pressed, the mode is changed as follows:

CD

REPEAT → REPEAT ALL → (off)

MP3

REPEAT → REPEAT ALL → REPEAT ALBUM → (off)

- If one of the following buttons is pressed, repeat mode will be canceled:

  STOP, FUNCTION, OPEN/CLOSE, STANDBY/ON

Repeat one track

Press the REPEAT button once during playback. "REPEAT" lights.
The track being played will be played repeatedly. If you press the Skip button (I◄◄ or ►►I) and select another track, the track you selected will be played repeatedly.

It is also possible to select a track to be repeated in the stop mode. Press the REPEAT button, select a track using the Skip button (I◄◄ or ►►I), and then press the Play/Pause button (►/❚❚) to start playback.

Repeat all the tracks

All the tracks will be played repeatedly.
Press the REPEAT button twice. "REPEAT ALL" lights.
During programmed playback, programmed tracks will be played repeatedly.

Repeat all the tracks in the folder (MP3)

All the tracks in the folder will be played repeatedly.
Press the REPEAT button three times. "REPEAT ALBUM" lights.

Search Mode (MP3 only)

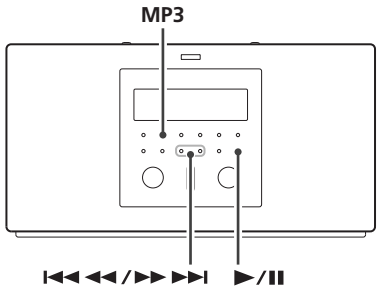

Search for a name of track

You can select the track by searching for its name.

- This function is not available during playback from USB memory card.

1 Press the MP3 button once.

An alphabet (initial letter of a track name) and a track name are displayed.

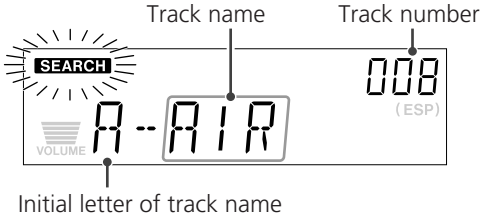

- To cancel the search mode, press the STOP button (■).

2 Select the initial letter of the track you want to listen to by pressing the SKIP button (I◄◄ or ►►I).

3 Press and hold the SKIP button (I◄◄ or ►►I).

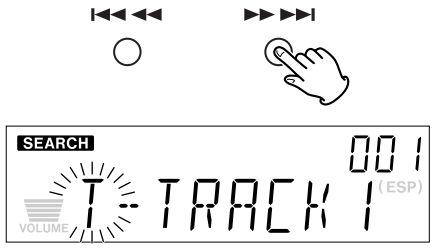

Then you can select the track that has same initial letter by pressing the SKIP button (I◄◄ or ►►I).

4 Press the PLAY/PAUSE button (►/II).

Playback starts from the selected track.

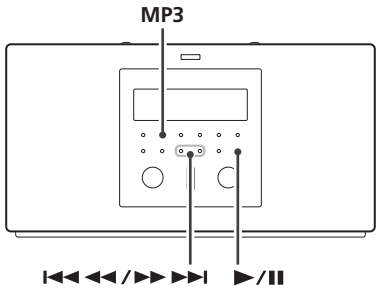

Search for a track in a folder

1 Press the MP3 button twice in CD mode or once in CARD-USB mode.

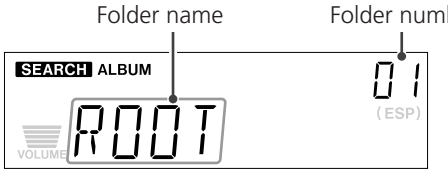

The name of folder is displayed.

- MP3 tracks recorded out of folders are in the "ROOT" folder.

2 Press the SKIP button (I◄◄ or ►►I) to find the folder that the track you want to listen to is included.

3 Press and hold the SKIP button (I◄◄ or ►►I).

Then you can select the track in the folder by pressing the SKIP button (I◄◄ or ►►I).

4 Press the PLAY/PAUSE button (►/II) to start playback.

Playback starts from the selected track.

- If you skip step **3**, playback will start from the first track in the selected folder.

Programmed Playback

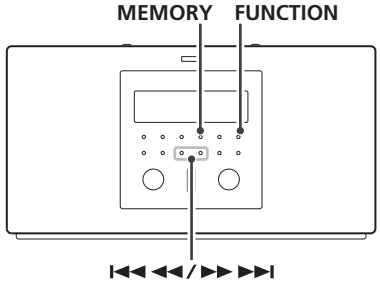

- Up to 64 tracks can be programmed in the desired order.
- Shuffle function doesn't work during programmed playback.

1 Press the FUNCTION button to select "CD" or "CARD-USB".



2 Press the MEMORY button in the stop mode.

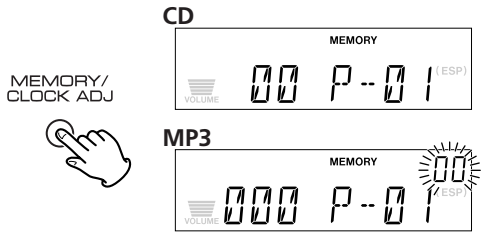

The MEMORY indicator appears on the display.

- To cancel the programme mode, press the Stop button (■).

3 Press the Skip button (I◄◄ or ►►I) repeatedly to select a folder of a MP3 disc or USB memory card, then press the MEMORY button.

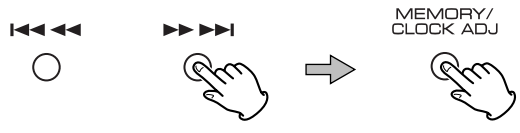

- MP3 tracks recorded out of folders are in the "01" (ROOT) folder.
- Skip this step when programming a CD.

4 Press the Skip button (I◄◄ or ►►I) repeatedly to select a track, then press the MEMORY button.

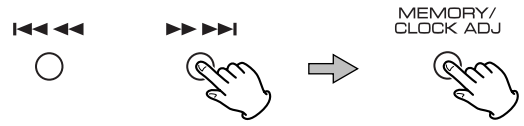

The track is programmed, and "P-02" is displayed.

- Repeat steps **3** and **4** to programme more tracks.
- You can programme up to 64 tracks.

5 When the selection of track numbers is completed, press the Play/Pause button (►/II) to start programme playback.

- When the playback of all the programmed tracks has finished, or if the STOP button (■) is pressed, the MEMORY indicator will go off and the programme mode will be cancelled.
  But the programmed contents are still retained in memory. You can return to the programmed playback by pressing the MEMORY button and the Play/Pause button (►/II).

To check the programmed order

In the stop mode, press the MEMORY button repeatedly. The track number and programme number will be shown on the display.

To add a track to the end of the program

In the stop mode, press the MEMORY button repeatedly until "00" appears on the display. Select a track number using the Skip button (I◄◄ or ►►I) and then press the MEMORY button. The track is added to the end of the program.

To overwrite the program

In the stop mode, press the MEMORY button repeatedly until the programme number to be changed appears on the display.
Select a new track number using the Skip button (I◄◄ or ►►I) and then press the MEMORY button.

To clear program

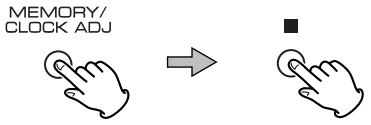

To clear the programmed contents, press the MEMORY and the STOP button (■) in the stop mode.

- If the OPEN/CLOSE or the STANDBY/ON button is pressed, the programmed contents will also be cleared.
- If you press the FUNCTION button to switch the source from "CD" to "CARD-USB" (or from "CARD-USB" to "CD"), the programmed contents will be cleared.
- If the unit is disconnected from the power supply, the programmed contents will be cleared.

Shuffle Playback

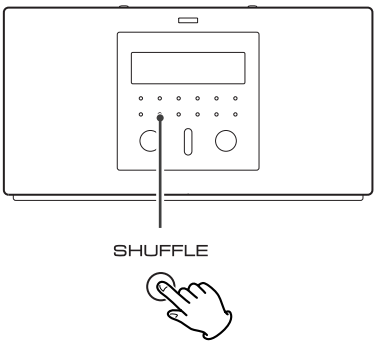

The tracks can be played randomly. Press the SHUFFLE button during playback or when in the stop mode. "SHUFFLE" will then light up in the display.

- If you press the ►►I button during shuffle playback, next track will be randomly selected and played. If you press the I◄◄ button, the currently played track will be played from the beginning. A track cannot be replayed during shuffle playback.
- Shuffle playback doesn't work during programmed playback.
- If one of the following buttons is pressed, shuffle mode will be canceled:

  SHUFFLE, STOP, OPEN/CLOSE,
  FUNCTION, STANDBY/ON

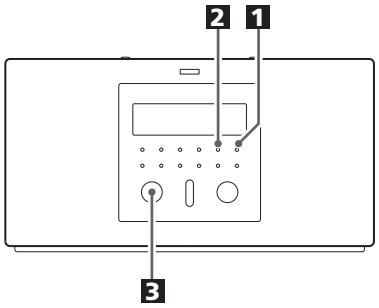

1 Press the FUNCTION button to select "TUNER".

2 Press the BAND button to select a band.

3 Select the station you want to listen to (auto selection).

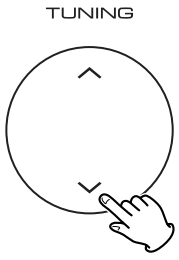

Hold down the TUNING Up or Down button until the frequency display begins to change. When a station is tuned in, the tuning process will stop automatically.

- Press the Up or Down button to stop the auto selection.

Selecting stations which cannot be tuned automatically (manual selection)

When the Up or Down button is pressed momentarily, the frequency changes by a fixed step. Press the Up or Down button repeatedly until the station you want to listen to is found.

FM MODE button

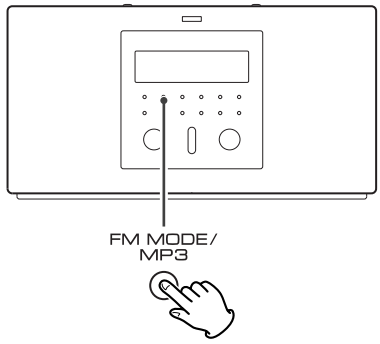

Pressing this button alternates between STEREO mode and MONO mode.

STEREO

FM stereo broadcasts are received in stereo and the "STEREO" indicator will light.

MONO

In weak FM stereo reception areas, select this mode. Reception will now be forced to monaural, reducing unwanted noise.

If the reception is poor

AM broadcast

Turn around the unit to find the best position for AM stations.

FM broadcast

For a good reception, turn around the antenna so that you can get the stations clearly.

- Unplug the USB memory card when you listening radio broadcasts.

Preset Tuning

You can store 30 FM and 10 AM stations into preset channels.

If the power supply is interrupted, the settings kept in memory (clock, preset stations, timer setting) will be erased.

1 Tune in a station you want to listen to (see steps 1 to 3 on page 20).

2 Press the MEMORY button.

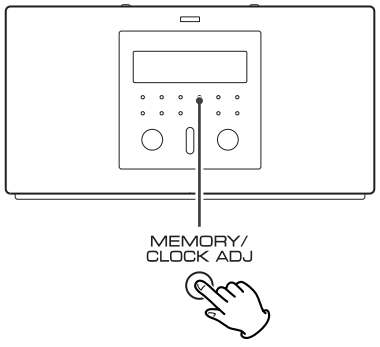

3 Within 5 seconds, select a preset channel to store the station using the PRESET buttons of the remote control unit.

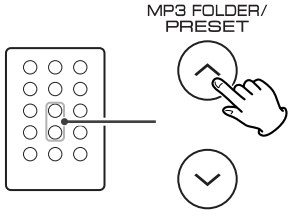

4 Within 5 seconds, press the MEMORY button.

The station is stored and the MEMORY indicator goes off.
To store more stations, repeat steps 1 to 4.

How to select preset stations

1 Press the BAND button to select a band.

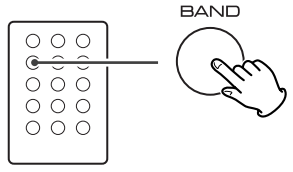

2 Select a preset channel using the PRESET buttons.

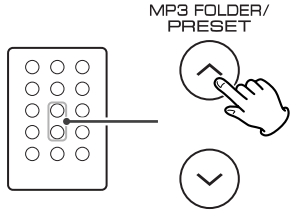

Setting the Clock

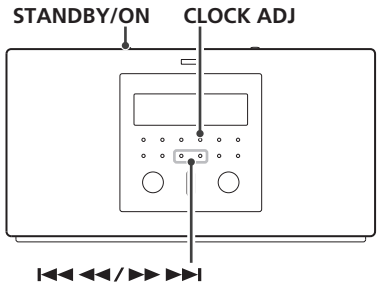

1 If the unit is on, press the STANDBY/ON switch to turn it off.

2 Press and hold down the CLOCK ADJ button.

"12 HOUR" or "24 HOUR" blinks. If you want to change the hour mode, press the I◄◄ or ►►I button.

- If no button is pressed for 10 seconds, the time setting mode will be cancelled.

3 Press the CLOCK ADJ button once more.

The "hour" value blinks.

4 Press the SKIP button (I◄◄ / ►►I) to set the current hour.



5 Press the CLOCK ADJ button.

The "minute" value blinks.

6 Press the SKIP button (I◄◄ / ►►I) to set the current minute.



7 Press the CLOCK ADJ button.

The clock starts.

If the power supply is interrupted, the settings kept in memory (clock, preset stations, timer setting) will be erased.

Setting the Timer 1

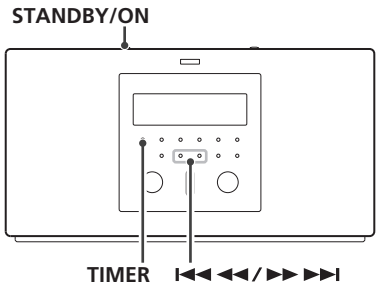

- Adjust the clock before setting the timer.
- You cannot set the timer in TUNER mode. If TUNER is selected, press the FUNCTION button to select any other mode.

1 Press and hold the TIMER button until "TIMER" and "ON" indicators appear on the display.



The "hour" value starts flashing.

- When no button is pressed for 10 seconds, the timer setting mode will be cancelled.

2 Press the SKIP button (I◄◄ / ►►I) to set the start time (hour), and then press the TIMER button.

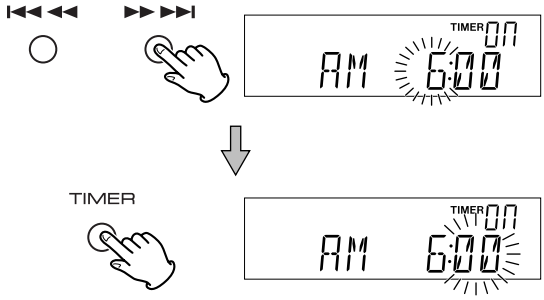

The "minutes" value starts flashing.

3 Press the SKIP button (I◄◄ / ►►I) to set the start time (minute), and then press the TIMER button.

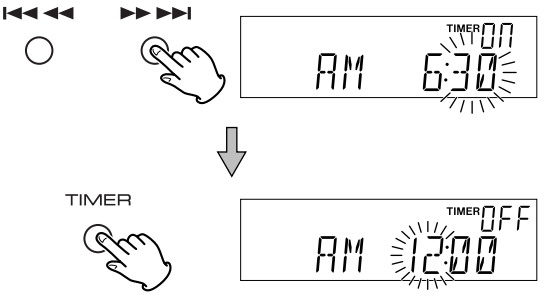

"TIMER" and "OFF" indiactors appear on the display and the "hour" value starts flashing.

4 Press the SKIP button (I◄◄ / ►►I) to set the stop time (hour), and then press the TIMER button.

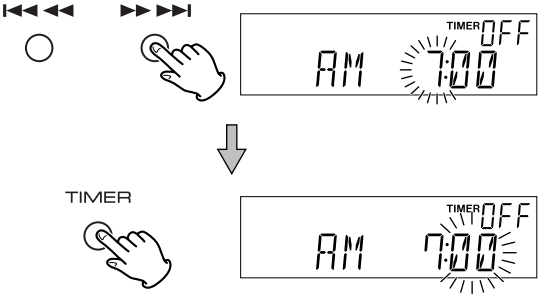

The "minutes" value starts flashing.

5 Press the SKIP button (I◄◄ / ►►I) to set the stop time (minute), and then press the TIMER button.

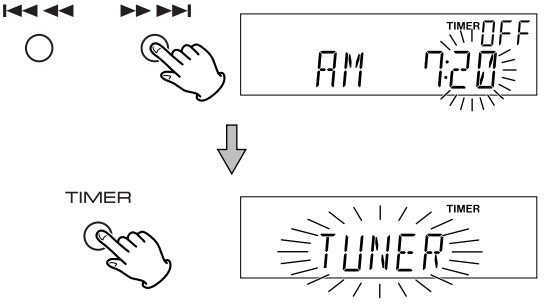

6 Press the SKIP button (⏮ / ⏭) to select a source (CD or TUNER), and then press the TIMER button.

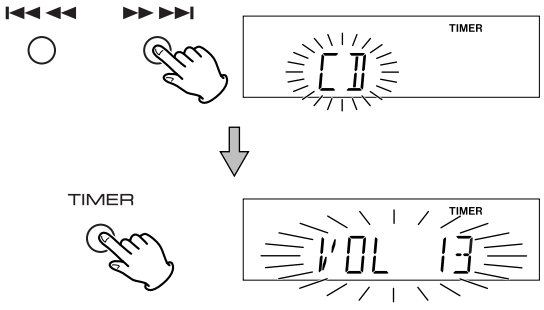

7 Press the SKIP button (⏮ / ⏭) to set the volume, and then press the TIMER button.

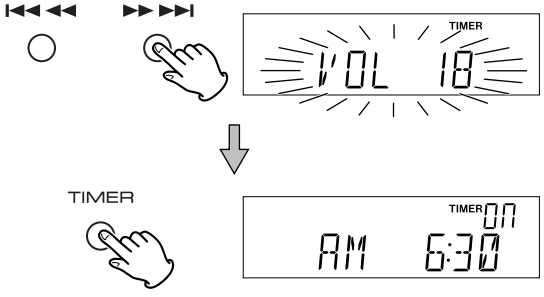

Setting the timer is now completed and the timer is turned on.
Your timer setting is displayed one by one, and the TIMER indicator lights on the display.

8 Prepare the source.

When the source is set to "CD", set a CD.
When the source is set to "TUNER", tune in a station.

9 Press the STANDBY/ON switch to turn the unit off (standby).

The clock and the timer indicator are displayed.
The unit will turn on and off at the specified time every day.

Don't forget to turn the unit off (standby), or the timer won't work.

If the power supply is interrupted, the settings kept in memory (clock, preset stations, timer setting) will be erased.

To turn on or off the timer

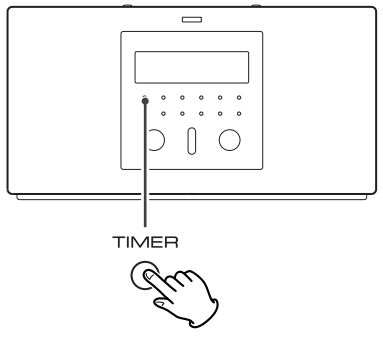

When you don't use the timer, press the TIMER button to turn it off. (The TIMER indicator desappears from the display.) Press the TIMER button again to turn it on.

When the timer is turned on, the timer setting is displayed one by one, and the TIMER indicator lights on the display.

If you have problems with your system, look through this chart and see if you can solve the problem yourself before calling your dealer or TEAC service center.

General

No power

➔ Check the connection to the AC power supply. Check and make sure the AC source is not a switched outlet and that, if it is, the switch is turned on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan into the outlet.

No sound from speakers.

➔ Select the source by pressing the FUNCTION button.
➔ Adjust the volume.
➔ Pull out the headphone's plug from the PHONES jack.
➔ If the VOLUME level indicator is blinking, press the MUTING button. (When "CD" or "CARD-USB" is selected, press the Play/Pause button (►/❚❚) to start playback.)

The sound is noisy.

➔ The unit is too close to a TV or similar appliances. Install the unit apart from them, or turn them off.

Remote control doesn't work.

➔ Press the STANDBY/ON switch to turn the unit on.
➔ When the battery has run out, put in a new one.
➔ Use remote control unit within the range (5 m) and point at the front panel.
➔ Clear obstacles between the remote control unit and the main unit.
➔ If a strong light is near the unit, turn it off.

CD Player

Cannot play.

➔ Load a disc with the label side up.
➔ If the disc is dirty, clean the surface of the disc.
➔ A blank disc has been loaded. Load a prerecorded disc.
➔ Depending on the disc, etc. it may not be possible to play back CD-R/RW discs. Try again with another disc.
➔ You cannot play back unfinalized CD-R/RW discs. Finalize such a disc in a CD recorder and try again.

Sound skips.

➔ Place the unit on a stable place to avoid vibration and shock.
➔ If the disc is dirty, clean the surface of the disc.
➔ Don't use scratched, damaged or warped discs.

Tuner

Cannot listen to any station, or signal is too weak.

➔ Tune in the station properly.
➔ Rotate the unit or antenna for the best reception position.

Though the broadcast is stereo, it sounds monaural.

➔ Press the FM MODE button.

If normal operation cannot be recovered, unplug the power cord from the outlet and plug it again.

If the power supply is interrupted, the settings kept in memory (clock, preset stations, timer setting) will be erased.

Beware of condensation

When the unit (or a disc) is moved from a cold to a warm place, or used after a sudden temperature change, there is a danger of condensation; vapor in the air could condense on the internal mechanism, making correct operation erratic or impossible. To prevent this, or if this occurs, leave the unit for one or two hours with the power turned on. The unit will stabilize at the temperature of its surroundings.

Maintenance

If the surface of the unit gets dirty, wipe with a soft cloth or use diluted mild liquid soap. Never spray liquid directly on this unit. Apply your cleaner to your cleaning cloth and wipe gently. Be sure to remove any excess completely. Do not use thinner, benzene or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

Specifications

TUNER Section

Frequency Range (FM) . . . 87.50 MHz to 108.00 MHz
Frequency Range (AM) . . . . . 522 kHz to 1620 kHz

CD PLAYER Section

Frequency Response . . . . . 20 Hz to 20 kHz (±1dB)
Wow and Flutter . . . . . Unmeasurable

SPEAKER SYSTEM Section

Type . . . . . 65 mm x 2
Impedance . . . . . 4 ohms

GENERAL

Total Output Power . . . . . 3 W + 3 W
Power Requirement (AC adaptor) 230V, 50Hz
Power Consumption . . . . . 20 W
Dimension (W x H x D) . . . . . 390 x 208 x 118 mm
Weight . . . . . 2.9 kg

Standard Accessories:

AC Adaptor x 1
Remote Control Unit (RC-996) x 1
USB cable x 1
Owner's Manual x 1
Warranty Card x 1
Template for Wall Mounting x 1

- Design and specifications are subject to change without notice.
- Illustrations may differ slightly from production models.

For European customers
Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

TEAC

TEAC CORPORATION	3-7-3, Nakacho, Musashino-shi, Tokyo 180-8550, Japan Phone: (0422) 52-5081
TEAC AMERICA, INC.	7733 Telegraph Road, Montebello, California 90640 Phone: (323) 726-0303
TEAC CANADA LTD.	5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada Phone: (905) 890-8008
TEAC MEXICO, S.A. De C.V	Campesinos N°184, Colonia Granjas Esmeralda, Delegacion Iztapalapa, CP 09810, México DF Phone: (525) 581-5500
TEAC UK LIMITED	Unit 19 & 20, The Courtyards, Hatters Lane, Watford, Hertfordshire, WD18 8TE , U.K. Phone: (0845) 130-2511
TEAC EUROPE GmbH	Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany Phone: 0611-71580
TEAC AUSTRALIA PTY., LTD. A.B.N. 11 113 998 048	30 Tullamarine Park Road, Tullamarine, VIC 3043, Australia Phone: (03) 8336-6500

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number Serial number

0406·MA-1079A